

MOZA AirCross S Camera & Lens Compatibility List

Brand	Model	Cable	Function				Camera Firmware Version	*Notes
			Shutter	Record	Focus	Power Supply		
Sony	A1	M3C-CP	✓	✓	✓	✓	1.30	Setting (Menu): 1. Menu--Network--Smartphone Connect--[Off] 2. Menu--Network--Transfer/Remote--PC Remote Function--[On] & PC Remote Cnct Method[USB] & Still Img. Save Dest [Camera] Unable to take pictures in video mode A1+FE1.8/20G (Without Eyepiece)
	A7R2	M3C-Micro	✗	✓	✓	✓	4.01	Setting (Menu): 1. Menu--Setup--USB Connection [PC Remote] [Multi] Port Available
	A7R3	M3C-CP M3C-Micro	✓	✓	✓	✓	3.10	Setting (Menu): 1. Menu--Network--Ctrl w/ Smartphone--[Off] 2. Menu--Setup--USB Connection [PC Remote] 3. Menu--Setup-- PC Remote Function-- Still Img. Save Dest [PC+Camera] Unable to take pictures in video mode
	A7R4	M3C-CP M3C-Micro	✓	✓	✓	✓		Setting (Menu): 1. Menu--Network--Ctrl w/ Smartphone--[Off] 2. Menu-- Network-- PC Remote Function--[On] & PC Remote Cnct Method[USB] & Still Img. Save Dest [Camera]
	A7	M3C-Micro	✗	✓	✓	✗	3.20	Setting (Menu): 1. Menu--Setup--USB Connection [PC Remote] [Multi] Port Available
	A7M2	M3C-Micro	✗	✓	✓	✗	4.01	Setting (Menu): 1. Menu--Setup--USB Connection [PC Remote] [Multi] Port Available Unable to take pictures in video mode
	A7M3	M3C-CP M3C-Micro	✓	✓	✓	✓	4.01	Setting (Menu): 1. Menu--Network--Ctrl w/ Smartphone--[Off] 2. Menu--Setup--USB Connection [PC Remote] 2. Menu--Setup-- PC Remote Function-- Still Img. Save Dest [PC+Camera]
	A7M4	M3C-CP M3C-Micro	✓	✓	✓	✓	1.00	Setting (Menu): 1. Menu-- Network --Transfer/Remote--PC Remote Function--[On] & Still Img. Save Dest [Camera] M3C-CP cable support power supply
	A7C	M3C-CP	✓	✓	✓	✓		Setting (Menu): 1. Menu--Network--Ctrl w/ Smartphone--[Off] 2. Menu-- Network-- PC Remote Function--[On] & PC Remote Cnct Method[USB] & Still Img. Save Dest [Camera]
	A7S	M3C-Micro	✗	✓	✓	✗	3.20	Setting (Menu): 1. Menu--Setup--USB Connection [PC Remote] [Multi] Port Available Unable to take pictures in video mode
	A7S2	M3C-Micro	✗	✓	✓	✓	3.01	Setting (Menu): 1. Menu--Setup--USB Connection [PC Remote] [Multi] Port Available Unable to take pictures in video mode
	A7S3	M3C-CP M3C-Micro	✓	✓	✓	-	2.01	Setting (Menu): 1. Menu--Network--Ctrl w/ Smartphone--[Off] 2. Menu-- Network-- Transfer/Remote--[On] & PC Remote Cnct Method[USB] & Still Img. Save Dest [Camera]
	A9	M3C-Micro	✓	✓	✓	✓	6.00	Setting (Menu): 1. Menu--Network--Ctrl w/ Smartphone--[Off] 2. Menu--Setup--USB Connection [PC Remote] 3. Menu--Setup--PC Remote Function--Still Img. Save Dest [Camera] [Multi] Port Available Unable to take pictures in video mode
	FX3	M3C-CP M3C-Micro	✓	✓	✓	✓	1.01	Setting (Menu): 1. Menu--Network--Transfer/Remote--Ctrl w/ Smartphone--[Off] 2. Menu--Network--Transfer/Remote--PC Remote Function--[On] & PC Remote Cnct Method[USB] & Still Img. Save Dest [Camera] Unable to take pictures in record mode M3C-CP cable support power supply
	ZV1	M3C-Micro	✓	✓	✓	✓	2.01	Setting (Menu): 1. Menu--Network--Ctrl w/ Smartphone--[Off] 2. Menu--Network--PC Remote Function--[On] & PC Remote Cnct Method[USB] & Still Img. Save Dest [Camera] [Multi] Port Available
	ZV-E10	M3C-CP	✓	✓	✓	✓		Setting (Menu): 1. Menu--Network--Smartphone Connect--[Off] 2. Menu--Network--PC Remote Function--[On] & PC Remote Cnct Method[USB] & Still Img. Save Dest [Camera]
	A6000	M3C-Micro	✗	✓	✓	✗		Setting (Menu): 1. Menu--Setup--USB Connection [PC Remote]
	A6100	M3C-Micro	✓	✓	✓	✓	1.00	Setting (Menu): 1. Menu--Network--Ctrl w/ Smartphone--[Off] 2. Menu--Setup--USB Connection [PC Remote] 3. Menu--Setup--PC Remote Setup--Still Img. Save Dest [PC+Camera] [Multi] Port Available Unable to take pictures in video mode
	A6300	M3C-Micro	✗	✓	✓	✓	2.01	Setting (Menu): 1. Menu--Setup--USB Connection [PC Remote] [Multi] Port Available Unable to take pictures in video mode
	A6400	M3C-Micro	✓	✓	✓	✓	1.00	Setting (Menu): 1. Menu--Network--Ctrl w/ Smartphone--[Off] 2. Menu--Setup--USB Connection [PC Remote] 3. Menu--Setup--PC Remote Setup--Still Img. Save Dest [PC+Camera] [Multi] Port Available Unable to take pictures in video mode
A6500	M3C-Micro	✓	✓	✓	✓	1.05	Setting (Menu): 1. Menu--Setup--USB Connection [PC Remote] 2. Menu--Setup--PC Remote Setup--Still Img. Save Dest [PC+Camera] [Multi] Port Available Unable to take pictures in video mode	
RX10 0M5	M3C-Micro	✗	✓	✓	✓	2.00	Setting (Menu): 1. Menu--Setup--USB Connection [PC Remote] [Multi] Port Available Unable to take pictures in video mode	

	RX100M6	M3C - Micro	✓	✓	✓	✓	1.00	Setting (Menu): 1. Menu--Network--Ctrl w/ Smartphone--[Off] 2. Menu--Setup--USB Connection [PC Remote] 3. Menu--Setup--PC Remote Setup--Still Img. Save Dest [PC+Camera] [Multi] Port Available Unable to take pictures in video mode
	RX100M7	M3C - Micro	✓	✓	✓	✓	1.00	Setting (Menu): 1. Menu--Network--Ctrl w/ Smartphone--[Off] 2. Menu--Setup--USB Connection [PC Remote] 3. Menu--Setup--PC Remote Setup--Still Img. Save Dest [Camera] [Multi] Port Available
Canon	EOS R	M3C - CP	✓	✓	✓	✗	1.6.0	Unable to take pictures in video mode
	EOS RP	M3C - CP	✓	✓	✓	✗	1.6.0	Unable to take pictures in video mode
	EOS R5	M3C - CP	✓	✓	✓	✗	1.5.0	Unable to take pictures in video mode
	EOS R5C	M3C - CP	✓	✓	✓	✗	1.6.0	Unable to take pictures in video mode
	EOS R6	M3C - CP	✓	✓	✓	✗	1.6.0	Unable to take pictures in video mode
	EOS R7	M3C - CP	✓	✓	✓	✗	1.1.0	Unable to take pictures in video mode
	EOS R10	M3C - CP	✓	✓	✓	✗	1.0.1	Unable to take pictures in video mode
	EOS M6 II	M3C - CP	✓	✓	✓	✗		
	EOS M50	M3C - Micro	✓	✓	✓	✗		
	EOS M50 II	M3C - Micro	✓	✓	✓	✗	1.0.0	Unable to take pictures in video mode
	EOS 70D	M3C - Mini	✓	✓	✓	✗		Unable to take pictures in video mode
	EOS M200		✓	✓	✓	✗	1.0.0	Unable to take pictures in video mode
	EOS 200DII	M3C - Micro	✓	✓	✓	✗		Unable to take pictures in video mode
	G7X3	M3C - CP	✓	✓	✓	✗	1.3.1	
Fujifilm	X-T3	M3C - CP	✓	✓	✓	✓	4.30	Setting (Menu): 1. Menu--Setting--Connection Setting--Connection Mode [USB Tether Shooting Auto] Unable to record in photo mode Unable to take pictures in video mode Unplug the control cable and restart the camera after switching to photo/video mode
	X-T30	M3C - CP	✗	✓	✓	✓	1.4.0	Setting (Menu): 1. Menu--Setting--Connection Setting--Connection Mode [USB Tether Shooting Auto] 2. Rotate the mode selector to video mode
	X-T4	M3C - CP	✓	✓	✓	✗	1.22	Setting (Menu): 1. Menu--Setting--Connection Setting--Connection Mode [USB Tether Shooting Auto] Unable to record in photo mode Unable to take pictures in video mode Unplug the control cable and restart the camera after switching to photo/video mode
	X-S10	M3C - CP	✓	✓	✓	✓	2.40	Setting (Menu): 1. Menu--Setting--Connection Setting--Connection Mode [USB Tether Shooting Auto] Unable to record in photo mode Unable to take pictures in video mode Unplug the control cable and restart the camera after switching to photo/video mode
	X-H2	M3C - CP	✓	✓	✓	✓	1.00	Setting (Menu): 1. Menu--Network/USB Setting--Select Connection Setting [USB Tether Shooting Auto] Unable to record in photo mode Unable to take pictures in video mode Unplug the control cable and restart the camera after switching to photo/video mode
	X-H2S	M3C - CP	✓	✓	✓	✓	2.00	Setting (Menu): 1. Menu--Network/USB Setting--Select Connection Setting [USB Tether Shooting Auto] Unable to record in photo mode Unable to take pictures in video mode Unplug the control cable and restart the camera after switching to photo/video mode
Nikon	Z5	M3C - CP	✓	✓	✓	✓	1.20	
	Z6	M3C - CP	✓	✗	✓	✓	3.40	
	Z6 II	M3C - CP	✓	✗	✓	✓	1.40	
	Z fc	M3C - CP	✓	✓	✓	✓	1.10	
Panasonic	GH5	M3C - CP	✓	✓	✓	✗	2.7	Getting Started: 1. Turn on the camera 2. Turn on the gimbal 3. Connect the cable to camera [Select PC(Tether)]
	GH5S	M3C - CP	✓	✓	✓	✗	2.5	Getting Started: 1. Turn on the camera 2. Turn on the gimbal 3. Connect the cable to camera [Select PC(Tether)] Unable to take pictures in video mode

PS: The MOZA Master app prompts to change the file saving format to JPEG during shooting, as RAW format is currently not supported.