

MOZA Aircross 3相机适配清单 (2.0)

品牌	型号	固件版本	使用线材	拍照	录制	对焦	供电
FUJIFILM	X-T3	4.1	MCSC-Remote	√	√	√	
	X-T4			✗	✗	✗	✗
	X-T30		MCSC-Remote	√	√	√	✗
	X-T30 II		MCSC-Remote	√	√	√	✗
SONY	A7S	V3.20	MCSC-Multi/C	√	√	√	✗
			M3C-Micro	√	√	√	√
	A6000	V3.21	M3C-Micro	√	√	√	√
	A6400		MCSC-Multi/C	√	√	√	√
	A5100		MCSC-Multi/C	√	√	√	✗
	A6300	V2.01	MCSC-Multi/C	√	√	√	✗
	A6500	V1.00	MCSC-Multi/C	√	√	√	✗
	A7S2	3.0.0	MCSC-Multi/C	√	√	√	✗
	A7S3		MCSC-Multi/C	√	√	√	✗
	A7M3	3.0.0	MCSC-Multi/C	√	√	√	✗
			M3C-C	√	√	√	√
	A7R3		MCSC-Multi/C	√	√	√	√
	A7R4		MCSC-Multi/C	√	√	√	√
	A7M2		MCSC-Multi/C	√	√	√	✗
	A7C			√	√	√	√
	A9		MCSC-Multi/C	√	√	√	√
	RX 100 M5		MCSC-Multi/C	√	√	√	✗
	ZVE100		M3C-CP	√	√	√	
Panasonic	S1	2.4 (S1H)	M3C-C	√	√	√	✗
			MCSC-Remote	√	√	√	✗
	GH5	V2.7	M3C-C	√	√	√	✗
			MCSC-Remote	√	√	√	✗
	GH5 S		M3C-C	√	√	√	✗
			MCSC-Remote	√	√	√	✗
Canon	5D2	V2.1.2	M3C-Mini	√	√	√	✗
	5D3	V1.6.3	M3C-Mini	√	√	√	✗
	5D4	1.2.1	M3C-Mini	√	√	√	✗
	6D	1.1.9	M3C-Mini	√	√	√	✗
	6D2	1.0.2	M3C-Mini	√	√	√	✗
	7D2		M3C-Micro	√	√	√	✗
	70D		M3C-Mini	√	√	√	✗
	77D	1.0.2	M3C-Mini	√	√	√	✗
	80D	1.0.1	M3C-Mini	√	√	√	✗
	850D			✗	✗	✗	✗
	EOS R	1.7.0	M3C-Mini	√	√	√	✗
	EOS R5	1.2.0	M3C-CP	√	✗	√	✗
	EOS R6	1.3.1	M3C-CP	√	✗	√	✗
	EOS M50 M2		M3C-Micro	√	√	√	✗
	EOS M6 M2		M3C-Micro	√	√	√	✗
	G7X M3			✗	✗	✗	✗
Nikon	D850	1.2.0	M3C-Micro	√	√	√	✗
	Z5	1.0.2	M3C-C	√	√	√	√
	Z50	2.0.0	M3C-Micro	√	√	√	✗
	Z6	3.1.0	M3C-C	√	√	√	✗

Z6 II	1.0.1	M3C-CP	✓	✓	✓	✓
Z7 II	1.1.0	M3C-CP	✓	✓	✓	✓
ZFC			✗	✗	✗	✗

*以上相机型号官方已测试验证，表格会随固件发布实时更新，如有变动恕不另行通知。